


Korrvu[®] Suspension Packaging Notebook Computer Packing Instructions

Step #1




- Form shipping sleeve into computer box.
- Gently lift side flaps up one inch to pre-fold perforations.

Step #2

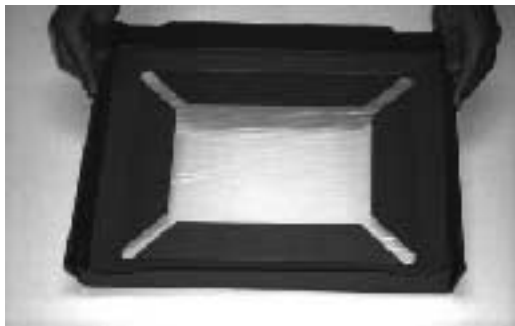

- Push end flaps up and inward to form bottom tray.

Step #3

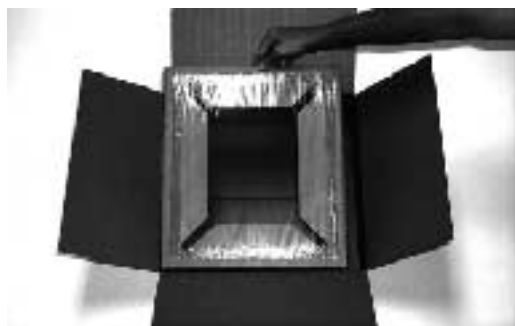

- While compressing ends turn tray over and insert into box **Film Side Up.**

Step #4



- Fold small ends of additional scored divider provided and insert into box to create an accessories area.

Step #5



- Place laptop computer on film in the center of bottom tray (film side is up).

Step #6



- Form second tray (see steps 1 & 2) and place over laptop **Film Side Down.** (toward computer)

Note:

Press down firmly on top tray applying pressure to suspend laptop between film layers.

LAPTOP MUST BE SANDWICHED BETWEEN FILM SIDE OF TRAYS